(ALUZ Instruction Manual)







Please read the instruction manual before installation. Please turn off the power supply before installation, operated by professional personnel.

Once the ceiling is not strong enough, suggest to use self-made wooden frame for connecting. Avoid using wet cloth to clean the fitting. The light source of this product is not replaceable, when damaged or reached the service life should be replaced, and do a good job of recycling. Please do not assemble the product without authorization, any damage caused by disassembling without authorization will no longer be covered by the warranty.

Model	Input	Dimension(mm)	Cutout(mm)	Remark
81012787.4 81032318 81032878.2 81032518	AC 220V~240V	Ø56*H76	Ø60	
81032668 81032708 81032328 81032080	AC 220V~240V	Ø74*H102	Ø78	
81032090 81032170 81033348 81032100 81032180 81033358	AC 220V~240V	Ø99*H125	Ø102	
81033368 81052768 81032558 81033378 81052778 81032598	AC 220V~240V	Ø122*139	Ø125	
81032638 81054620 81032608 81032758 81054630 81032808	AC 220V~240V	Ø149*H157	Ø150	

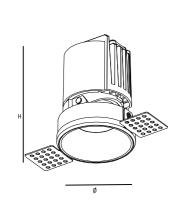

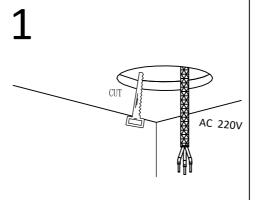


Open the mounting hole on ceiling according

to the cutout size, and pass the wires


through the hole.



Adjust the bracket position according to thickness of ceiling.

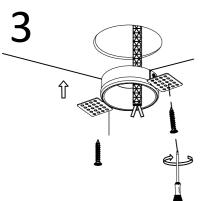

Clip the trimless mounting bracket intothe cutout hole in the ceiling, then lock the trimless mounting bracket to theceiling with self-tapping screws and pull the wire out of the bracket.

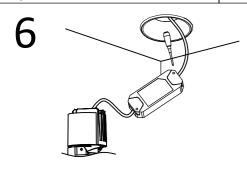


2

Terminal block


wiring

Remove the protective cover of the power supply with a screwdriver, connect the power cord according to the wiring instruction marked on the driver, and do the insulation protection well. And insert the driver into cutout on the ceiling

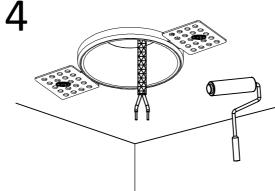


The trimless fixed bracket and joints shall be painted with plaster (it is recommended to paste mesh cloth before plaster to avoid wall cracking), and be covered with smooth and clean.

Install the housing on the trimless bracket and make sure it stable, then fix with reflector.Adjustable downlight series can adjust the irradiation angle according to the demand to meet the lighting requirements.

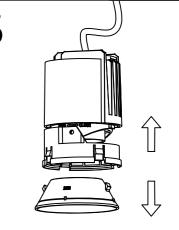

Take the reflector off from housing.

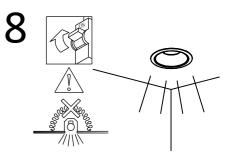

Turn on the power supply, lights up

Warning: The fitting should be never covered by insulation gasket or similar materials under any circumstance.Please ensure that the wires are conneced correctly before turning on the power supply. Do not look emitting lights directly to avoid burning your eyes.