(CORE PRO Instruction Manual)



 



Please read the instruction manual before installation.

 $Please\ turn\ off\ the\ power\ supply\ before\ installation,\ operated\ by\ professional\ personnel.$ Once the ceiling is not strong enough, suggest to use self-made wooden frame for connecting. Avoid using wet cloth to clean the fitting.


The light source of this product is not replaceable, when damaged or reached the service life should be replaced, and do a good job of recycling.

Please do not assemble the product without authorization, any damage caused by disassembling without authorization will no longer be covered $\,$ by the warranty.




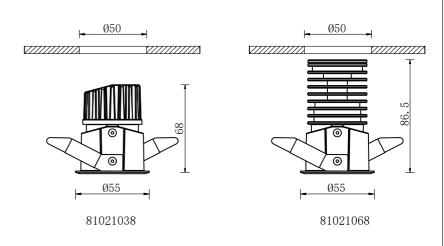


Note: Only the main model No. is shown in the manual. This manual is common to all types of luminaires in the same series.

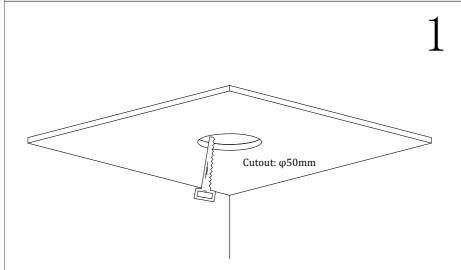


Open the mounting hole on ceiling according to cutout size, this product is suitable for the thickness of the 5-20mm of ceiling

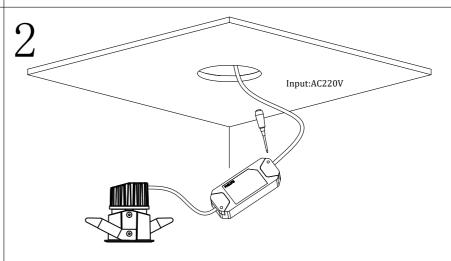


Remove the protective cover of the power supply with a screwdriver, connect the power cord according to the wiring instruction marked on the driver, and do the insulation protection well.

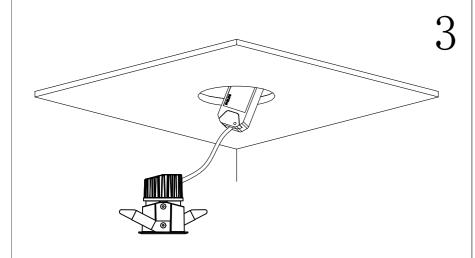


Insert the driver into cutout on the ceiling.

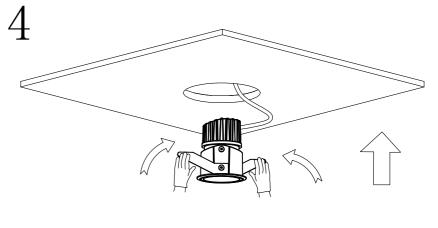

 $Press\ the\ mounting\ spring\ upward\ in\ the\ direction\ indicated\ by\ the\ arrow,\ and\ push\ the\ luminaire$ in until the frame is flat with the ceiling.

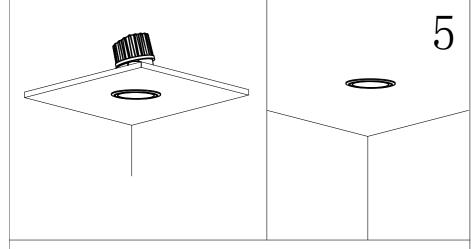

Adjustable downlight series can adjust the irradiation angle according to the demand to meet the lighting requirements.

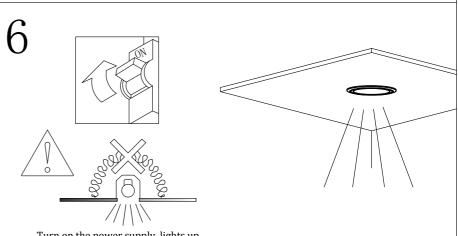

Turn on the power supply, lights up.

Warning: The fitting should be never covered by insulation gasket or similar materials under any

Please ensure that the wires are conneced correctly before turning on the power supply. Do not look emitting lights directly to avoid burning your eyes.